

Το λογισμικό **INTEL Quartus Prime Lite Edition** είναι ένα βιομηχανικό λογισμικό EDA (Electronic Design Automation) για τη σχεδίαση σύνθετων ψηφιακών συστημάτων. Η έκδοση Lite δεν απαιτεί ειδική άδεια χρήσης και μπορεί να εγκατασταθεί εύκολα στο υπολογιστή για εκπαιδευτική χρήση.

1. Αρχικά πρέπει να κάνουμε ένα λογαριασμό (sign-up) στο σύστημα της INTEL και να εισάγουμε τα φοιτητικά στοιχεία και το email (yourusername@cs.ihu.gr).

https://www.intel.com/content/www/us/en/homepage.html

Register for Basic Intel® Accour Sign up for a Basic Intel® Account to be able to login for specific programs in order to gain additional privi	It to My Intel and start leges.	t your journey with In	itel. You will still need to re	gister
Personal Information				
First Name	La	ast Name		
Business Email Address		Username		
Password		Confirm Password		
Country/Region				~
Job Function				~
Country/Region Code v Phot	ne		Extension (optional)	

Αφού δημιουργήσουμε τον λογαριασμό κάνουμε εισαγωγή στο σύστημα (sign-in).

(intel)	PRODUCTS	SUPPORT	SOLUTIONS	DEVELOPERS
Sign In				
ofnihu			•••••	
By signing	in, you agree to o	ur Terms of Servi	ce.	
Si	gn In	🗌 Remember m	e	

Forgot your Intel username or password?

2. Στη συνέχεια οδηγούμαστε στη διεύθυνση όπου είναι διαθέσιμο το λογισμικό.

https://fpgasoftware.intel.com/?edition=lite

Επιλέγουμε την έκδοση **19.1** και το λειτουργικό **Windows**.

# Download Center for FPGAs

Design Software Embedded Software Archives Licensing Programming Software Drivers Board System Design Board Layout and Test Legacy Software	Quartus Prime Lite Edition   Release date: September, 2019   Latest Release: v19.1   Intel Quartus Prime Design Software  Select release: 19.1  Operating System  Vindows  Linux
	<ul> <li>The Quartus Prime Lite Edition Design Software, Version 19.1 includes functional and security updates. Users should keep their software up-to-date and follow the technical recommendations to help improve security. Additional security updates are planned and will be provided as they become available. Users should promptly install the latest version upon release.</li> <li>The Quartus Prime Lite Edition Design Software, Version 19.1 is subject to removal from the web when support for all devices in this release are available in a newer version, or all devices supported by this version are obsolete. If you would like to receive customer notifications by e-mail, please subscribe to our <u>subscribe to our customer notification mailing list</u>.</li> <li>To use the Quartus Prime Lite Edition Design Software, Version 19.1 on Windows, you must download and install the patch available in this <u>KDB Solution</u>.</li> <li>OS Support and IP support have changed in this release. Refer to the <u>Release Notes</u> for details.</li> <li>The Quartus Prime Lite Edition Design Software, Version 19.1 supports the following device families: Arria II. (536.5MB), Cyclone 10 LP. (293.5MB), Cyclone IV. (516.3MB), Cyclone V. (1434.3MB), MAX II, MAX V. (13.1MB), and MAX 10 FPGA. (343.3MB).</li> </ul>

Επιλέγουμε από το Individual Files: το Quartus Prime, το ModelSim και από τα FPGA devices: την οικογένεια συσκευών MAX 10 FPGA.

wnload and in	stall instructions:	- More	
ad Intel FPGA S	oftware v19.1 Insta	llation FAO	
ick Start Guide			
)uartus Prime	Lite Edition (Free	)	
Ouartus Pri	me (includes Nios	II EDS)	
Size: 1.5 GE	MD5: C64B01C9F	5DE3E14724F0CA046E56A3E	
** Nios II EDS	on Windows requires	Ubuntu 18.04 LTS on Windows Subsystem for Linux (WSL), which	
** Nios II EDS	requires you to install	an Eclipse IDE manually.	
ModelSim-	Intel EPGA Edition	(includes Starter Edition)	
Size: 968.2	MB MD5: C094C7E	B72139545F77D93DB0F750594C	
e <b>vices</b> ou must insta	ll device support fo	or at least one device family to use the Quartus Prime soft	ware.
oevices ou must insta Arria II devi Size: 499.1	ll device support fo ice support. (536.5 MB MD5: B9D8043	or at least one device family to use the Quartus Prime soft 5 <b>MB)</b> 3A8978EA0C60D841C3B61DB43B	ware.
oevices You must insta Arria II devi Size: 499.1 Cyclone IV	ll device support fo ice support. (536.5 MB MD5: B9D8043 device support. (5	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB)	ware.
oevices fou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0	ll device support fo ice support. (536.6 MB MD5: B9D8043 device support. (5 MB MD5: 421FCBE	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF	ware. C
oevices ou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10	ll device support fo ce support. (536.5 MB MD5: B9D804: device support. (5 MB MD5: 421FCBE LP device suppor	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB)	ware.
oevices fou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10 Size: 265.7	ll device support fo ce support. (536.5 MB MD5: B9D804: device support. (5 MB MD5: 421FCBE LP device suppor MB MD5: 09CC8ES	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB) 2314101A1224F4364950D97431	ware.
oevices fou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10 Size: 265.7 Cyclone V o	Il device support fo ice support. (536.5 MB MD5: B9D8043 device support. (5 MB MD5: 421FCBE LP device support MB MD5: 09CC8E3 levice support. (14	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB) 9314101A1224F4364950D97431 434.3MB)	ware.
evices ou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10 Size: 265.7 Cyclone V c Size: 1.3 GE	Il device support fo ice support. (536.5 MB MD5: B9D804: device support. (5 MB MD5: 421FCBE LP device support MB MD5: 09CC8ES levice support. (14 MD5: FF775862C	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB) 9314101A1224F4364950D97431 434.3MB) 7E1EB0F0083844DAE554079	ware.
oevices fou must insta Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10 Size: 265.7 Cyclone V c Size: 1.3 GE MAX II, MAX	Il device support fo ice support. (536.5 MB MD5: B9D804: device support. (5 MB MD5: 421FCBE LP device support MB MD5: 09CC8ES levice support. (14 MD5: FF775862C K V device suppor	or at least one device family to use the Quartus Prime soft 5MB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB) 9314101A1224F4364950D97431 434.3MB) 7E1EB0F0083844DAE554079 t. (13.1MB)	ware.
Arria II devi Size: 499.1 Cyclone IV Size: 466.0 Cyclone 10 Size: 265.7 Cyclone V of Size: 1.3 GE MAX II, MA	Il device support fo ce support. (536.5 MB MD5: B9D804: device support. (5 MB MD5: 421FCB6 LP device support MB MD5: 09CC85 levice support. (14 MD5: FF775862C K V device suppor IB MD5: 8D4FB07/	or at least one device family to use the Quartus Prime soft SMB) 3A8978EA0C60D841C3B61DB43B 16.3MB) 35BCD5C66AF026EB693FCCA7EF t. (293.5MB) 3314101A1224F4364950D97431 434.3MB) 7E1EB0F0083844DAE554079 t. (13.1MB) A55F9894C53695808F9779D44	ware. C C C C

Kαι από το Additional Software: το Help και το Programmer & Tools.

Combined Files	Individual Files	Additional Software				
Download and i	ownload and install instructions:					
Read Intel FPGA	Software v19.1 Insta	Ilation FAQ				
Quick Start Guid	<u>e</u>					
Add-On Soft	ware					
Quartus P	rime Help					
Size: 275.5	5 MB <b>MD5:</b> 5F70A7	CE7C93386FA7AB6A10A680287A				
Stand-Alone	Software					
Intel High	Level Synthesis Co	mpiler				
Size: 60.1	MB MD5: 86E7137	142CEE1CE78F18BA70352E2E3				
Quartus P	rime Programmer a	and Tools				
Size: 342.	7 MB <b>MD5:</b> ADF410	05032CCA4F7DAB72A7A8CDBD35				
Note: The Quart	us Prime software i	s a full-featured EDA product. Depending on your download speed,				
download times	may be lengthy.					

 Αφού κατεβάσετε τα αρχεία εγκατάστασης (πέντε αρχεία στο σύνολο) θα τα αντιγράψετε στον τοπικό σας δίσκο, <u>όλα στον ίδιο φάκελο</u> και προσέξτε όλο το μονοπάτι του φακέλου να είναι με λατινικούς χαρακτήρες: (π.χ. C:\Users\ofni\Desktop\Quartus\_Prime\_Lite\_v19\_1).

Επομένως, θα πρέπει να έχετε μια εικόνα με τα παρακάτω αρχεία:

> This PC > Desktop > Quartus\_Prime\_Lite\_v19\_1

··· ^			
Name	Date modified	Туре	Size
🐝 QuartusLiteSetup-19.1.0.670-windows	6/11/2020 1:32 PM	Application	1,599,126 KB
🐝 ModelSimSetup-19.1.0.670-windows	6/11/2020 12:44 PM	Application	991,415 KB
🐝 QuartusProgrammerSetup-19.1.0.670-wi	6/11/2020 12:37 PM	Application	350,960 KB
max10-19.1.0.670.qdz	6/11/2020 12:36 PM	QDZ File	340,745 KB
🐝 QuartusHelpSetup-19.1.0.670-windows	6/11/2020 12:34 PM	Application	282,067 KB

4. Εγκαθιστούμε την εφαρμογή QuartusLiteSetup-\* (Απαιτούνται γύρω στα 15GB ελεύθερα στον σκληρό δίσκο). <u>ΑΝ όλα τα αρχεία είναι στον ίδιο φάκελο</u>, το QuartusLiteSetup θα τα αναγνωρίσει αυτόματα και θα προχωρήσει στην εγκατάσταση τους.

Αφού ξεκινήσει η εγκατάσταση θα αναγνωρίσει τα αρχεία στον κοινό φάκελο και θα τα εμφανίσει στην λίστα των συστημάτων προς εγκατάσταση. Επιλέγουμε όπως φαίνεται στην εικόνα.



Στη συνέχεια ξεκινά η εγκατάσταση που ανάλογα το σύστημα διαρκεί αρκετή ώρα.

🕥 Installing Quartus Prime Lite Edition (Free) 19.1.0.670		_		×
Installing			in	tel
Wait while Setup installs Quartus Prime Lite Edition (Free) 19.1.0.670 Installing Installing Quartus Prime Help				
InstallBuilder	k Next	t >	Can	cel

Κατά τη διαδικασία της εγκατάστασης του Quartus Prime γίνεται και η εγκατάσταση των επιπρόσθετων λογισμικών όπως είναι ο βιομηχανικός προσομοιωτής ModelSIM (που είναι διαθέσιμος στην έκδοση Starter για εκπαιδευτικούς σκοπούς).

🕥 Installing Quartus Prime Lite E	dition (Free) 19.1.0.670			_		×
Installing					(in	tel
Wait while Setup installs Quartus Prim Installing ModelSim - Intel FPGA Start	ie Lite Edition (Free) 19. 1.0.670 Installing er Edition (Free)					
Installing Mo	idelSim - Intel FPGA Starter Edition 19.1.0.670 Installing Installing ModelSim - Intel FPGA VHDL model files	-		×		
InstallBuilder	< E	3ack	Ne	xt >	Can	cel

Μια από τις επιλογές, αφού ολοκληρωθεί η εγκατάσταση, είναι και η Launch USB Blaster II driver installation. Με την επιλογή αυτή ενεργοποιείται ο οδηγός για την εγκατάσταση του λογισμικού USB Blaster II που επιτρέπει την διασύνδεση του λογισμικού Quartus (από το PC που έχει εγκατασταθεί και μέσω USB) με μια αναπτυξιακή πλακέτα που διαθέτει FPGA για τον προγραμματισμό συσκευών FPGA.

🕥 Installing Quartus Prime Lite Edition (Free) 19.1.0.670 — 🗆 🗙				
	Quartus Prime Lite Edition (Free) 19.1.0.670 Installation Complete			
intel	Setup has finished installing Quartus Prime Lite Edition (Free) 19.1.0.670.          Launch USB Blaster II driver installation         Create shortcuts on Desktop         Launch Quartus Prime Lite Edition         Provide your feedback			
	< Back Fir	nish	Can	cel

Ακολουθούμε τον οδηγό για την εγκατάσταση του driver.

Device Driver Installation Wizard	ł
	Welcome to the Device Driver Installation Wizard! This wizard helps you install the software drivers that some computers devices need in order to work.
	< Back Next > Cancel

# Επιλέγουμε install.

Device Driver In	stallation Wizard
The drivers	are now installing
	📰 Windows Security X
	Would you like to install this device software? Name: Altera Publisher: IFDLII Production Key1
	Always trust software from "IFDLII Production Install Don't Install Don't Install
	You should only install driver software from publishers you trust. <u>How can I decide which device software is safe to install?</u>
	< Back Next > Cancel

Ο driver έχει εγκατασταθεί με επιτυχία.

Device Driver Installation Wizard				
	Completing the Device Driver Installation Wizard			
	The drivers were successfully in:	stalled on this computer.		
	You can now connect your devi came with instructions, please re	ce to this computer. If your device ad them first.		
	Driver Name	Status		
	✓ Altera (WinUSB) JTAG c	Ready to use		
	< Back	Finish Cancel		

Στη συνέχεια ξεκινά το λογισμικό Quartus και επιλέγουμε το Run.

🕥 Quartus Prime 19.1 Lite Edition X								
Thank you for installing the Quartus Prime software - the #1 in performance and productivity. T upgrade to a full featured edition, please https://www.intel.com/content/www/us/en/products/programmable.html.								
Select one of the following licensing options to continue:								
Select one of the following options								
O Buy a Quartus Prime software license								
Run the Quartus Prime software								
O Add an IP license file (for users who have purchased IP)								
OK Cancel								

Είναι καλό να κάνουμε και μια επανεκκίνηση των Windows για να ολοκληρωθούν όλες οι παραμετροποιήσεις.

## Altera USB Blaster Driver Installation Instructions

### (σε περίπτωση που δεν ακολουθήσετε τον οδηγό)

To install the driver for your USB Blaster cable, follow the instruction for your particular operating system.

## For Windows 10, do the following:

Plug the USB-Blaster into your PC.

Open the Device and Printers (Control Panel | Devices and Printers).

Under Unspecified, USB Blaster should be listed. Right mouse click on this and then select Properties.

Select the Hardware tab and select Properties.

A new window should pop up with the General tab already selected. Select Change Settings.

Again a new window should pop up with the General tab already selected. Select Update.

Select Browse my computer for driver software.

Find <Path to Quartus Prime installation>\quartus\drivers\

(Note 1: Your altera file is located at the location you selected when you first installed quartus. The location listed in this document is the default location)

(Note 2: Stop at the drivers folder, i.e., do NOT go deeper by opening a folder within the drivers folder)

Select OK. Make sure the proper path was selected then select Next.

If the Windows security window pops up Check the Always trust software from "Altera Corporation" box and select Install.

## For Windows 7 and Windows 8, do the following:

Plug the USB-Blaster download cable into the PC. The following will appear on the screen: Device driver software was not successfully install. Select Click here for details.

Select Change settings...

Now cancel this (probably by selecting Cancel)

Open the Device Manager (Windows Key | Control Panel | Device Manage)

Under Other devices, USB Blaster should be listed. Right mouse click on this and then select Update Driver Software...

Select Browse my computer for driver software

Find <Path to Quartus Prime installation>\quartus\drivers\, then select Next; (Note: Stop at this folder, i.e., do NOT go deeper by opening a folder within the drivers folder)

Check the Always trust ... box and then select Install

#### ModelSim-INTEL FPGA Starter Edition software

To ModelSim Altera Edition software δεν έχει παραμετροποιηθεί σωστά και δεν ανοίγει από το Quartus Prime.

#### Description(Περιγραφή προβλήματος)

Due to a problem in the Quartus, after installation, the default path to the ModelSim-Altera software is incorrectly set to: <install\_directory>\win32aloem (for example, C:\intelFPGA\_lite\19.1\win32aloem)

#### Workaround/Fix (Επίλυση προβλήματος)

To correct this issue, open **Options** dialog box by selecting **Options** on the **Tools** menu. Select the **EDA Tool Options** category, and change the path to the following: <install\_directory>**\modelsim\_ase\win32aloem** (for example, **C:\intelFPGA\_lite\19.1\modelsim\_ase\win32aloem**)

Υπάρχει και περίπτωση να έχετε κάποια παλαιότερη έκδοση του λογισμικού και να είναι διαφορετικός φάκελος εγκατάστασης. Με τον ίδιο τρόπο μπορείτε να δηλώσετε τη νέα εγκατάσταση.

Set as Input SystemVerilog in Quartus Prime

Assignments > Settings > Compiler Settings > Verilog HDL Input and choose "**SystemVerilog**" under Verilog version.

#### NUM\_PARALLEL\_PROCESSORS

Αν θέλουμε να μην βγαίνει το **WARNING** κατά την εκτέλεση του compilation για τον αριθμό των επεξεργαστών, τότε πηγαίνουμε στο φάκελο του Project, και ανοίγουμε με έναν text editor το αρχείο με κατάληξη <projectname>.qsf, στο αρχείο αυτό προσθέτουμε την παρακάτω γραμμή.

set\_global\_assignment -name NUM\_PARALLEL\_PROCESSORS 2

Το ίδιο μπορεί να γίνει και από το μενού:

Assignments>Setting>Compilation Process Setting

Και επιλέγουμε το Maximum Processors Allowed

# <u> Make this edit to simulation window (Digital Design – 1<sup>st</sup> Semester)</u>

vsim -c -t 1ps -L fiftyfivenm\_ver -L altera\_ver -L altera\_mf\_ver -L 220model\_ver -L sgate\_ver -L altera\_lnsim\_ver work.demo1\_vlg\_vec\_tst

#vsim -novopt -c -t 1ps -L fiftyfivenm\_ver -L altera\_ver -L altera\_mf\_ver -L 220model\_ver -L
sgate\_ver -L altera\_lnsim\_ver work.demo1\_vlg\_vec\_tst

Simulation Options	×							
Caution: Improperly modifying these settings can cause the simulation to fail HDL Language:  Verilog O VHDL (The language used for the testbench and netlist)								
Functional Simulation Settings Timing Simulation Settings								
Testbench Generation Command (Functional Simulation):								
quartus_edagen_testbenchtool=modelsim_oemformat=verilogwrite_settings_files=off mygates -c m								
Netlist Generation Command (Functional Simulation):								
quartus_edawrite_settings_files=offsimulationfunctional=onflatten_buses=offtool=modelsim_oe								
ModelSim Script (Functional Simulation):								
onerror {exit -code 1} vlib work vlog -work work mygates.vo								
<pre>vsim -c -t 1ps -L fiftyfivenm_ver -L altera_ver -L altera_mf_ver -L 220model_ver -L sgate_ver -L altera_lnsim_ve #vsim -novopt -c -t 1ps -L fiftyfivenm_ver -L altera_ver -L altera_mf_ver -L 220model_ver -L sgate_ver -L altera vcd file -direction mygates.msim.vcd vcd add -internal demo1_vlg_vec_tst/* vcd add -internal demo1_vlg_vec_tst/i1/* proc simTimestamp {}{ echo "Simulation time: \$::now ps" if {[string equal running [runStatus]]}{ after 2500 simTimestamp } } after 2500 simTimestamp run -all quit -f</pre>								
< >								
Restore Defaults Save Cancel								

And run again....

🕤 s	imulation Wave	tes - mygates - [Waveform1.vwf] — 🛛 🔿	<			
File	Edit View	Sim	ulation	Help	Search altera.com	6
	역 💥 🕹		Simulat	tion Settings	≝ 晄	
Master Time Bar: 0			Run Fu	nctional Simulation	nterval: 271.22 ns Start: End:	
	Name	Zinj.	Generat	te ModelSim Testbench and Script	270.0 ns 280.0 ns 290.0 ns 300.0 ns 310.0 ns	^
in —	A	B 1				
in —	в	B 1				
in —	С	ВO				
out	F	вх				